

Crew™

Adjustable Seat Depth

Lift lever up and hold, shift seat forward or back, and release lever to lock.

Arm Height


Push trigger up and hold, pull arm up or push down and release trigger to lock.

Arm Width

Pull lever down to release, slide arm in or out. Push lever up to lock.

Height-width-pivot arms

Press button under arm caps to adjust height. Grasp arm caps to slide width in/out and to pivot.

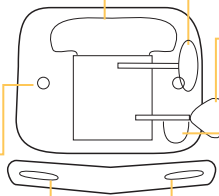

Pneumatic Height Adjustment

To raise chair, lift body weight up and pull lever.

Tilt Tension

To decrease, turn counterclockwise. To increase, turn clockwise.

Upright Back Lock

To release, lean forward and flip lever up. To lock, lean forward and flip lever down.

Back Height

While seated, pull both tabs inward, raise or lower back into desired position, release tabs.

Note: your chair may not have all the adjustments shown

For more information, visit us at www.turnstonefurniture.com

part # 93-9503298 rev c

Crew™



turnstone®